

İÇ DEKORASYON PÜSKÜRTME MAKİNESİ

DEKOR®

> Kod	Ürün
1302	Komple Makina
1303	Depo
1304	Tabanca

> Kullanım Amacı:

İç cephe dekorasyonlarında iç cephe kaplama boyası sıva, alçı sıvası, ahşap suntalar, prefabrike gibi yüzeyler üzerine uygulamak için kullanılır. Duvar üzerinde irili ufaklı grenler yapar.

> Gerekli Ekipman:

- 5 bar Hava basınçlı kompresör.
- İç cephe dekorasyon boyası.
- Kompresör ile tabanca arası hortum ve kelepçe.

> Kullanmadan Önce:

- İç cephe kaplama boyasını tankın içine koyun, kapağı kapatarak 5 no.lu vidayı sıkın.
- 9 no.lu girişe kompresörden gelen havayı bağlayınız.
- 11 no.lu vanadan havayı açın ve 1 no.lu hava saatin 4 bar basınca gelene kadar açık tutun.

> Kullanım Sırasında:

- Yüzeye uygulamadan önce boş bir yüzeyde deneme yapınız.
- 7 nolu vanadan boya akışını açarak boyama işine başlıya bilirsiniz.
- Boya yaparken 11 no.lu vana ile boyanın şiddetini, 7 no.lu vana ile boyanın dozajını ayarlıya bilirsiniz.

> Kullanım Sonrası:

- Boyama işiniz bitince 2.nolu vanadan tankın içindeki basıncı boşaltın.
- 5 no.lu vidayı gevşeterek kapağı açın ve kalan boyayı boşaltın.
- Tankı su ile yıkayın.
- Tekrar kapağı kapatın ve tankı basınçla doldurun.
- 7 no.lu vanayı açarak borudaki ve tabancadaki boyanın kurumasını engelliyebilirsiniz.

Bakım:



- Sarı başlıkdaki meme çapı zamanla aşınma nedeni ile genişleme yapabilir. Aşınma meydana gelmiş ise takımla beraber gelen yedeği ile değiştirin.
- Hortumu kontrol edin çatlak veya ezilme var ise yeni bir basınç hortumu ile değiştirin.
- Kelepçelerin sağlamlığını kontrol edin gerekli ise değiştirin.
- Tankın kapağı altında bulunan lastiğin sağlamlığını kontrol edin gerekli ise değiştirin.
- Hortum içinde malzeme kalmamasına özen gösterin.

> Önemli Not:

- Çalışma esnasında tankın kapağını açmayın.
- Tanktaki basıncı 2 no.lu hava tahliye vanası ile boşaltmadan kapağı açmayın.
- Hava basıncını, 6 barı geçirmeyin.

> Teknik Özellikler:

- Tank Çapı :	32 cm
- Tank Kalınlığı :	4 mm
- Doldurma Kapağı Çapı :	15 cm
- Yükseklik :	79 cm
- Genişlik :	38 cm
- Boru Uzunluğu :	6 m
- Boya Kapasitesi :	40 lt
- Boya Memesi Çapı :	3 mm
- Koli Ölçüleri (En / Boy / Yük.) :	50 cm / 50 cm / 90 cm
- Net Ağırlık :	38 kg
- Çalışma Basıncı :	5 bar

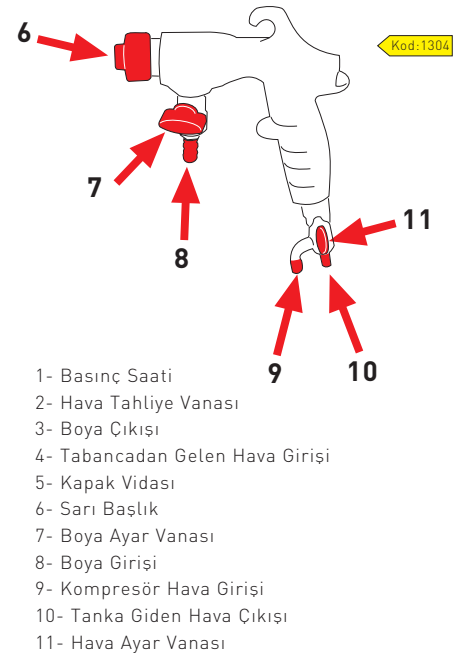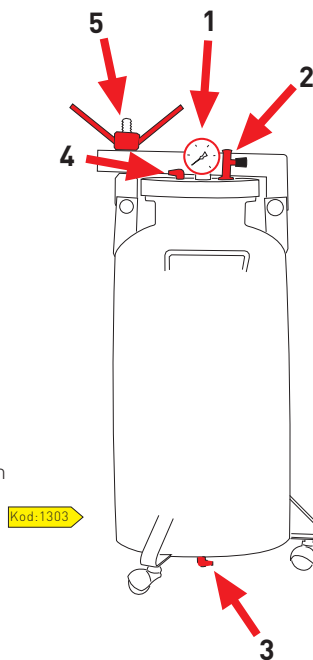

ÜCRETSİZ DANIŞMA HATTI

0850 711 1966

Inside Decoration Paint Spraying Tank

- > **Code Product**
- 1302 Complete Machine
- 1303 Tank
- 1304 PaintGun

> Usage:

Used for decorations on interior covering paint on plaster, wooden, prefabricate layers. It can make porous shapes in various sizes on the wall.

> Necessary Equipment:

- 5 bar air pressured compressor
- Interior decoration and mineral paint
- Hose and manacle to connect compressor with gun.

Before Using :

- > - Put the paint into the tank close cover, squeeze the screw no.5 which is shown in the figure.
- Connect the tube coming from compressor to tube no.9
- Open air valve no.11 and watch air pressure until increases to 4 bars.

During Usage:

- > - Release the valve no.7 to let start painting work.
- While you are painting adjust the paint violence with the valve no.11 and regulate dosage of the paint with the valve no.7.
- We suggest you to try on a surface before using.

After Using:

- > - After you have finished your paint job release the pressure form the valve no.2
- By loosen the nut no.5 open the cover and release the paint.
- Wash the tank with water
- Close the cover again and fill the tank with pressure.
- Open the valve no.7 and let the water clean the pipe and gun so you can hinder drying paint at pipe and at gun.

Care of the tank:

- > - The nozzle diameter of the yellow head can change with abrasion reason in time. If it happens change the nozzle with the spare one which comes with the set.
- Check the hose, if you see any split and crush change with new pressure hose.
- Check the condition of manacle and change if it is necessary
- Check the condition of rubber under cover of the tank and change if it is necessary

> Important Note :

- Do not open cover of the tank during working
- Do not open the cover before releasing the pressured air form the tank.
- Do not pressure more than 6 bars

> Technical Specifications:

- Diameter of tank: 32 cm
- Thickness of tank: 5 mm
- Diameter of the cover: 15 cm
- Height: 79 cm
- Wideness: 38 cm
- Pipe length: 6 m
- Paint capacity of the tank: 40 lt
- Gun nozzle diameter: 3 mm
- Measurements (Breadth, Length, Height): 50 cm / 50 cm / 90 cm
- Net weight : 38 kg

